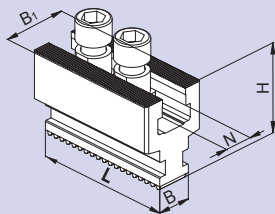


KOB

Kombi-Grundbacken für Backenschnellwechsel

- Modulgeradverzahnung System SMW für Spitzverzahnung Zoll
- Inklusive Nutensteine und Zylinderschrauben ISO 4762 – 12.9

Typ	Id.-Nr.	B	B ₁	H	L	N	Spitz- verzahnung	kg / Satz	SMW-AUTOBLOK
KOB 200-1	081323	22	45	56	85	17	1/16" x 90°	2.67	KNCS-N 210 KNCS-N 225 HG-N 210
KOB 250-1	081324	26	45	59.5	104	17	1/16" x 90°	3.63	KNCS-N 260 HG-N 260 KNCS-N 275
KOB 250-2	081325	26	50	67	104	21	1/16" x 90°	4.36	KNCS-N 260 HG-N 260 KNCS-N 275
KOB 315-2	081327	32	50	72	115	21	1/16" x 90°	5.46	KNCS-N 325 HG-N 315 KNCS-N 340
KOB 400-2	081329	32	60	76	125	25.5	3/32" x 90°	7.04	KNCS-N 400 HG-N 400 KNCS-N 315 HG-N 315
KOB 500-2	006474	45	64	84	160	25.5	3/32" x 90°	11.90	KNCS-N 500 HG-N 500 KNCS-N 630

Samchully	Röhм	Schunk
	DURO-NCES 200	ROTA THW 210
	DURO-A RC 215	ROTA THW plus 215
	DURO-NCSE 215	ROTA-G 200
		THW 210R
		ROTA NCW 225
		ROTA THW vario 215
	DURO-NCES 250	ROTA-THW 250
	DURO-A RC 260	ROTA THW plus 260
	DURO-NCSE 260	ROTA-G 250
		THW 250/265-R
		ROTA NCW 265
	DURO-NCES 250	ROTA-THW 250
	DURO-A RC 260	ROTA THW plus 260
	DURO-NCSE 260	ROTA-G 250
		THW 250/265-R
		ROTA NCW 265
	DURO-NCES 315	ROTA-THW 315
	DURO-A RC 315	ROTA THW plus 315
	DURO-NCSE 315	ROTA-G 315
		ROTA NCW 315
		THW 315-R
	DURO-NCES 400	ROTA THW 400
	DURO-A RC 400	THW 400-R
	DURO-NCSE 400	ROTA-G 400
	DURO-A RC 500/630	ROTA THW 500
	DURO-NCSE 500/630	THW 500-R
		ROTA-G 500
		ROTA THW 630
		THW 630-R
		ROTA THW 800